# 17. Rear Accessory Power Supply Socket

## A: WIRING DIAGRAM

Refer to "Rear Accessory Power Supply Socket System" in the wiring diagram. <Ref. to WI-344, WIRING DI-AGRAM, Rear Accessory Power Supply Socket System.>


### **B: REMOVAL**

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

#### NOTF:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the console box assembly. <Ref. to EI-67, REMOVAL, Console Box.>
- 3) Remove the socket assembly.
  - (1) Disconnect the connector. (STI model)
  - (2) While releasing the claw inside, press it in from the rear to remove the socket assembly.

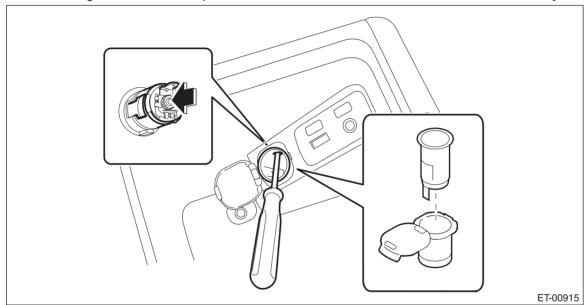


(3) Remove the cap - socket.

### C: INSTALLATION

- 1) Install the cap socket.
- 2) Install the socket assembly.

### NOTE:

Align the groove of the cap - socket with the claw of the socket assembly.

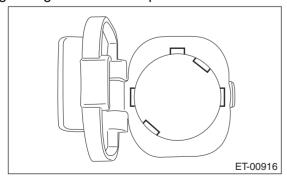

- 3) Install the console box assembly.
- 4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

#### NOTE:

For models other than STI model, connect the ground terminal to battery sensor.