

27.Trunk Room Trim

A: REMOVAL


1) Remove the clips, and remove the trim panel - trunk lid.

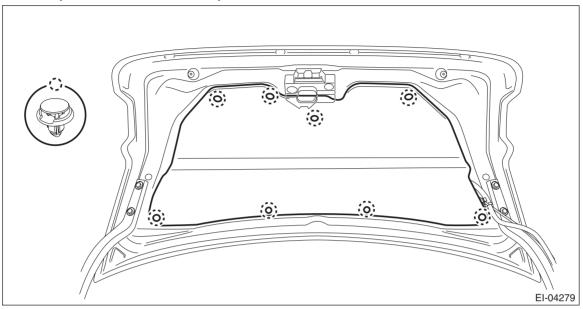

- 2) Tilt the backrest assembly forward.
- 3) Remove the mat trunk.
- 4) Remove the trim panel trunk rear.
 - (1) Remove the clip.
 - (2) Release the claws, and remove the trim panel trunk rear.

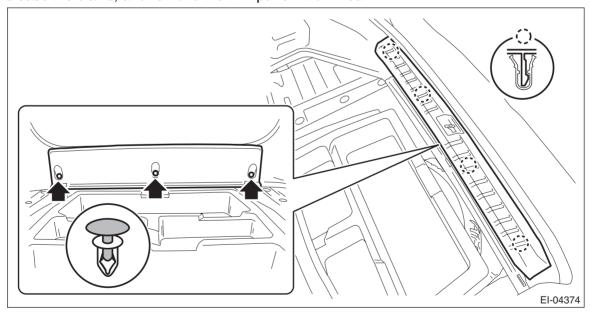

5) Remove the clips, and remove the trim panel - trunk side.

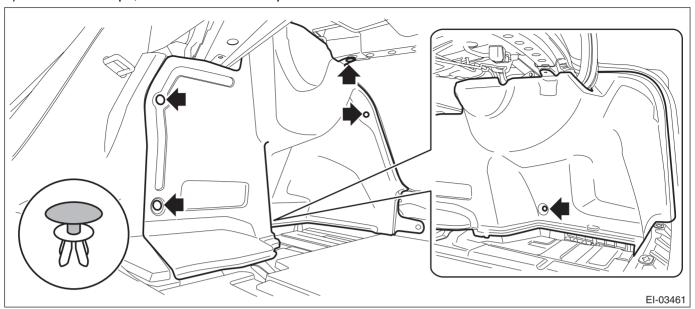

B: INSTALLATION

- 1) Install the trim panel trunk lid.
- 2) Install the trunk room mat.
- 3) Install the trim panel trunk rear.